

INSTALLATION INSTRUCTIONS



Polaris RZRXP High Clearance Radius Arms

Item	Description	Qty
A	Link Tubes	2
B	Heim Joints	4
C	5/8" Hex Jam Nuts	4
D	Lower Bushings (Small)	4
E	Upper Bushings (Large)	4

Installation Tools
15/16" Socket/Wrench
Phillips Screwdriver



**Allow 45 Minutes
for installation.**

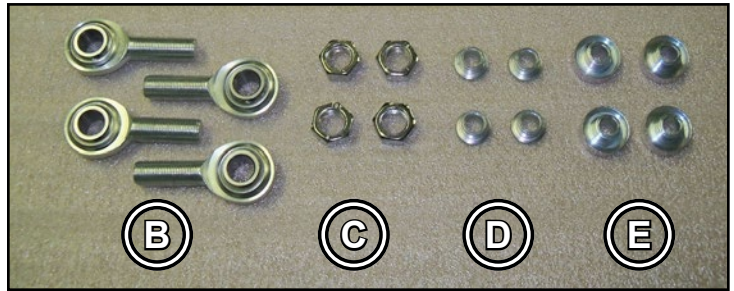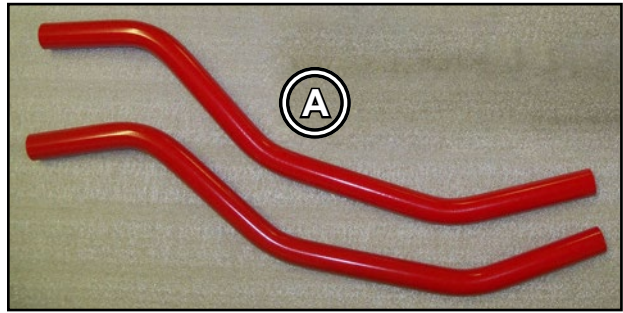

Read instructions and view illustrations before beginning.

Need help with your installation?

✉ sales@superatv.com 💻 www.superatv.com

☎ 1-812-574-7777 🕒 8:00am - 9:00pm EST M-Th
8:00am - 7:00pm EST Friday
9:00am - 2:00pm EST Saturday


*Thank You
For Choosing*
SUPERATV.COM

Liability Statement
SuperATV's products are designed to best fit users ATV/UTV under stock conditions. Adding, modifying, or fabricating any factory, or aftermarket, parts will void any warranty provided by SuperATV and is not recommended. SuperATV's products could interfere with other aftermarket accessories. If user has aftermarket products on machine, contact SuperATV to verify that they will work together.

Although SuperATV has thousands of satisfied customers, user should be aware that installing lift kits, long travel, or suspension kits, tires, etc will change the ride of machine and may increase maintenance and part wear. Operating any off-road machine while, or after, consuming alcohol and/or drugs increases risk of bodily harm or death. No warranty or representation is made as to this product's ability to protect user from severe injury or death. SuperATV urges operators and occupants to wear a helmet and appropriate riding gear at all times.

By purchasing and installing SuperATV products, user agrees that should damages occur, SuperATV will not be held responsible for loss of time, use, labor fees, replacement parts, or freight charges. SuperATV, nor any 3rd party, will not be held responsible for any direct, indirect, incidental, special, or consequential damages that result from any product purchased from SuperATV. The total liability of seller to user for all damages, losses, and causes of action, if any, shall not exceed the total purchase price paid for the product that gave rise to the claim.

SuperATV will warranty only parts provided by SuperATV. Any damage or problems with OEM housings, bearings, seals, or other manufacturers products will not be covered by SuperATV. SuperATV parts and products are not warrantied if item was not installed properly, misused, or modified.

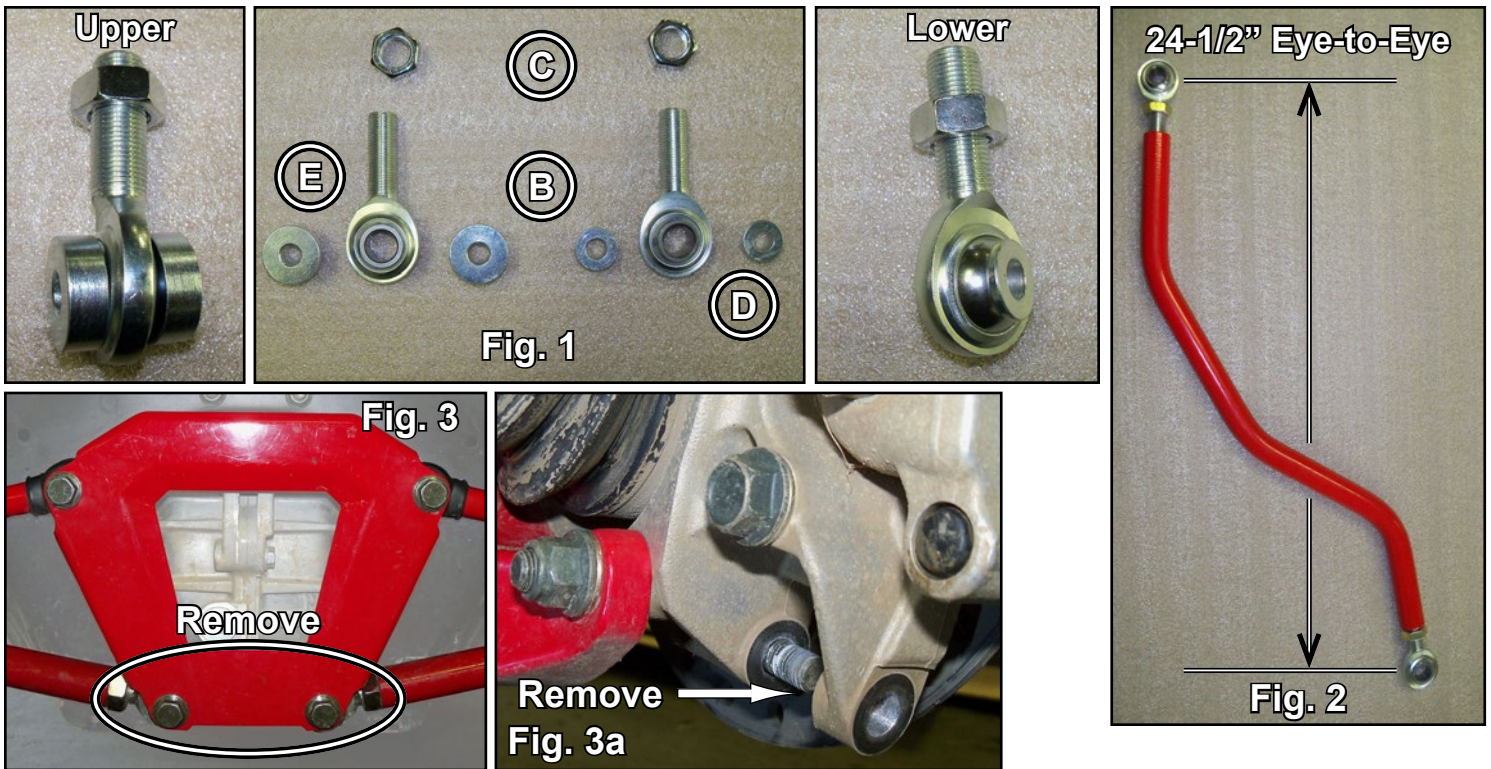

1. Insert (4) Lower Bushings (Small) (D) into (2) Heim Joints (B). See Fig. 1.
2. Insert (4) Upper Bushings (Large) (E) into (2) Heim Joints (B). See Fig. 1.
3. Insert (4) 5/8" Hex Jam Nuts (C) into (4) Heim Joints (B). See Fig. 1.
4. Assemble Heims to Link Tubes (A). See Fig. 2.
5. Raise rear of machine off ground, remove wheels (optional), and secure with jack stands.
6. Remove lower stock Link Tubes and hardware. Keep hardware for reuse. See Fig. 3-3a.
7. Insert Link Tube and secure each end with stock hardware. See Fig. 4.
8. Repeat steps for opposite Link Tube.

