
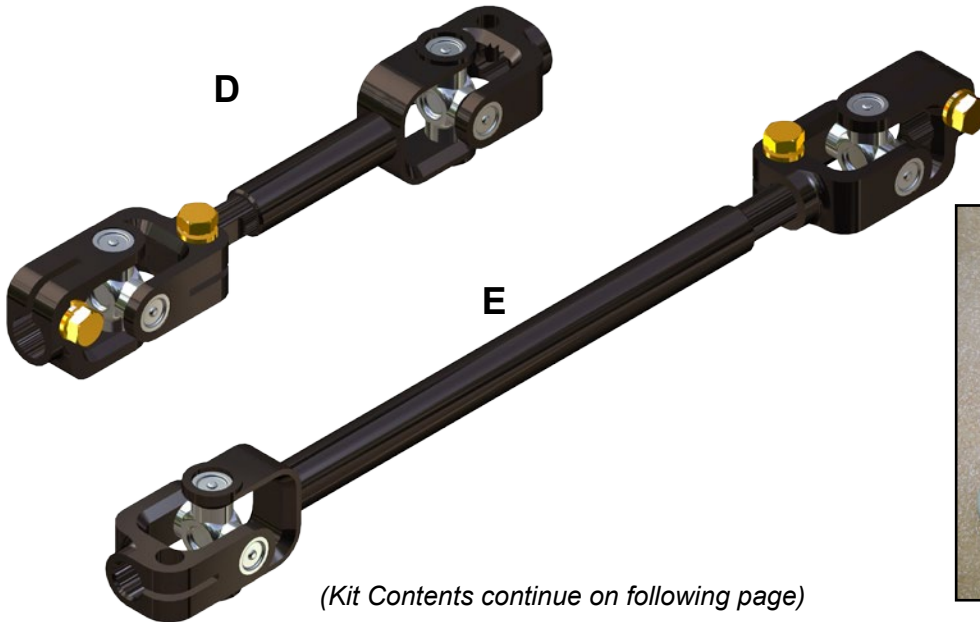


Item	Description	Qty	Item	Description	Qty
A	Control Module	1	N	Regulator Relocating Bracket	1
B	Plug and Play Harness	1	P	Mounting Bracket	1
C	Motor	1	Q	M8-1.25 x 20mm Lg. FHCS	3
D	Upper Shaft	1	R	M6-1.0 x 16mm Lg. HHCS	2
E	Lower Shaft	1	S	M6-1.0 x 30mm Lg. HHCS	4
F	Motor Bracket	1	T	M10 Flat Washer	1
G	M8-1.25 x 25mm Lg. HHCS	2	U	Plate Nut	1
H	M8 Flat Washers	4	V	M10-1.50 x 45mm Lg. HHCS	1
J	M8-1.25 Nylock Nuts	2			
K	M6 Flat Washers	6			
L	M6-1.0 Nylock Nuts	4			

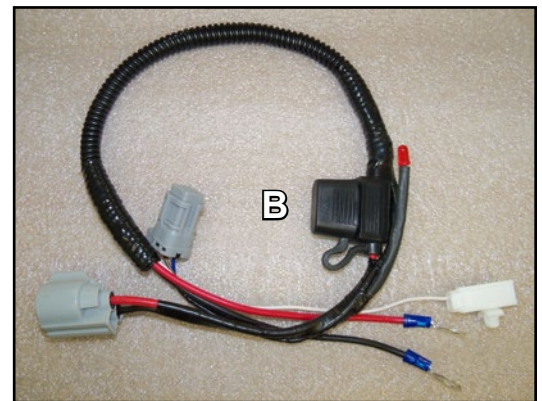

(Kit Contents continue on following page)

**Read instructions and view illustrations before beginning.**

**Need help with your installation?**



sales@superatv.com



www.superatv.com



1-812-574-7777



8:00am - 9:00pm EST M-Th  
8:00am - 7:00pm EST Friday  
9:00am - 2:00pm EST Saturday

Thank You  
For Choosing

# SUPERATV.COM

#### Liability Statement

SuperATV's products are designed to best fit users ATV/UTV under stock conditions. Adding, modifying, or fabricating any factory, or aftermarket, parts will void any warranty provided by SuperATV and is not recommended. SuperATV's products could interfere with other aftermarket accessories. If user has aftermarket products on machine, contact SuperATV to verify that they will work together.

Although SuperATV has thousands of satisfied customers, user should be aware that installing lift kits, long travel, or suspension kits, tires, etc will change the ride of machine and may increase maintenance and part wear. Operating any off-road machine while, or after, consuming alcohol and/or drugs increases risk of bodily harm or death. No warranty or representation is made as to this product's ability to protect user from severe injury or death. SuperATV urges operators and occupants to wear a helmet and appropriate riding gear at all times.


By purchasing and installing SuperATV products, user agrees that should damages occur, SuperATV will not be held responsible for loss of time, use, labor fees, replacement parts, or freight charges. SuperATV, nor any 3rd party, will not be held responsible for any direct, indirect, incidental, special, or consequential damages that result from any product purchased from SuperATV. The total liability of seller to user for all damages, losses, and causes of action, if any, shall not exceed the total purchase price paid for the product that gave rise to the claim.

SuperATV will warranty only parts provided by SuperATV. Any damage or problems with OEM housings, bearings, seals, or other manufacturers products will not be covered by SuperATV. SuperATV parts and products are not warranted if item was not installed properly, misused, or modified.

(Kit Contents continued)


R M6 x 16mm Lg. HHCS  
(includes Washers not shown)

V M10 x 45mm Lg. HHCS

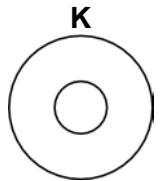


M6 Flat Washer


Q M8 x 20mm Lg. FHCS

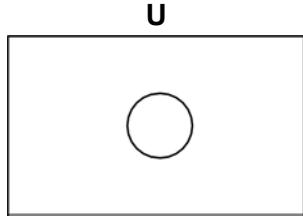

M10 Plate Nut

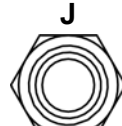

M8 Nylock Nut

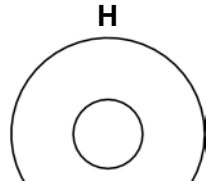


M8 Flat Washer

S M6 x 30mm Lg. HHCS




M6 Nylock Nut

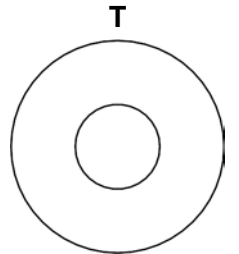

M10 Flat Washer

G M8 x 25mm Lg. HHCS

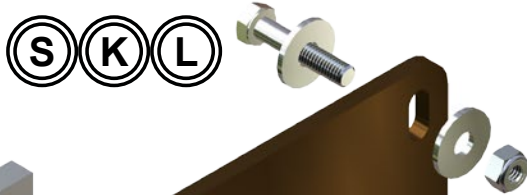

Front of machine







**Bracket Assembly Reference**  
(For reference only; Do not fully assemble)





**⚠ Before starting installation, ensure all connections are as follows: ⚠**

- Before installing, ensure that all waterproof connections are properly seated.
- If Gaskets are not seated, as shown, use a Flathead Screwdriver to seat.

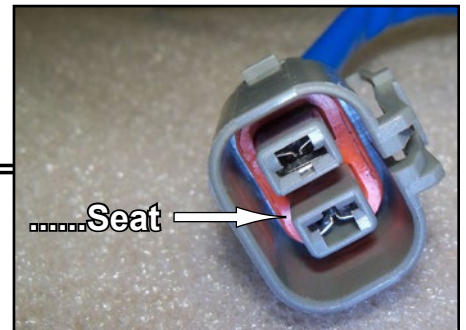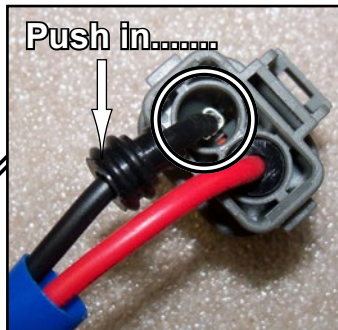
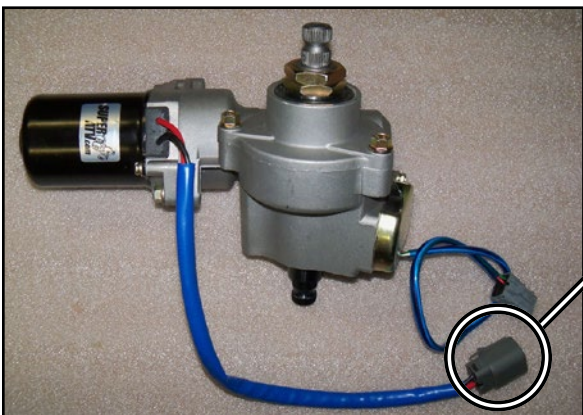
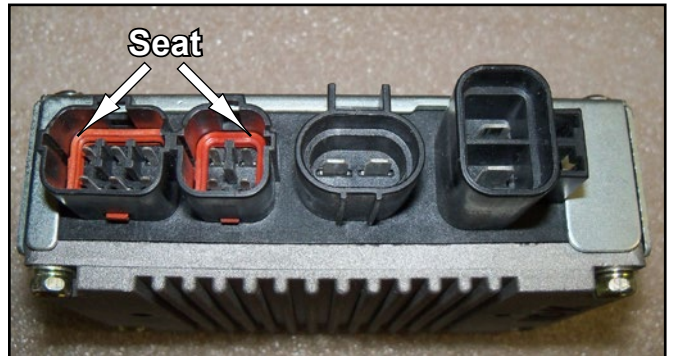
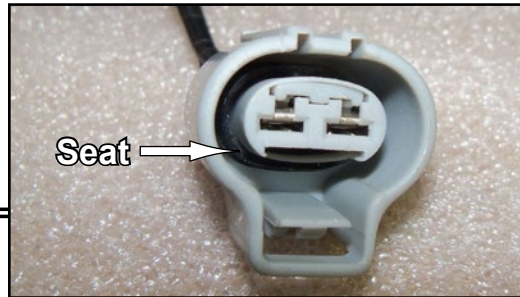
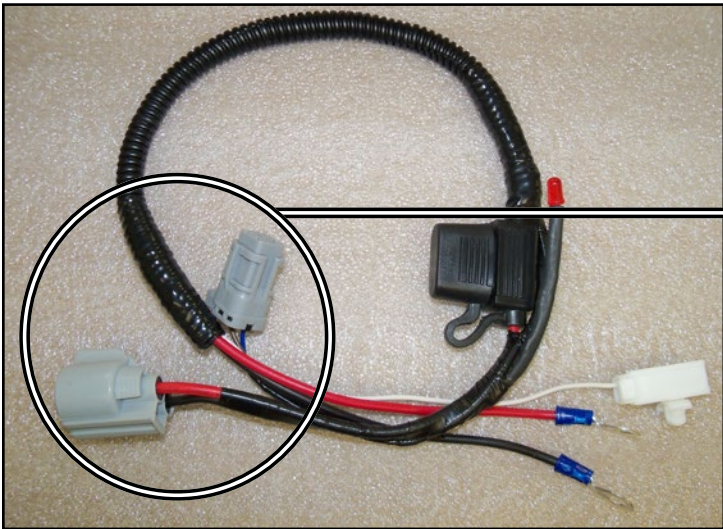











*Do not tighten hardware completely unless noted.*

1. Remove stock Lower Steering Shaft from Rack and Pinion.
2. Remove Steering Wheel and Steering Shaft.
3. Install Lower Shaft (E) and bolt to Rack and Pinion with supplied hardware. See Fig. 1.
4. Remove Voltage Regulator and Ground Wire. Keep hardware. See Fig. 2.
5. Install Mounting Bracket (P) to **Passenger Side** of stock Bracket with M6-1.0 x 30mm Lg. HHCS (S), M6 Flat Washer (K), and M6-1.0 Nylock Nut (L). Complete installation with M10-1.50 x 45mm Lg. HHCS (V), M10 Flat Washer (T), and Plate Nut (U). See Fig. 3 and Fig. 4.
6. Install Voltage Regulator to Regulator Relocating Bracket (N) with M6-1.0 x 30mm Lg. HHCS (S), M6 Flat Washers (K), and M6-1.0 Nylock Nuts (L). Install Voltage Regulator to lowest point on Regulator Relocating Bracket (N). See Fig. 3.
  - Install Regulator Relocating Bracket (N) to **Driver Side** of stock Bracket. Join Regulator Relocating Bracket (N) and Mounting Bracket (P) together with M6-1.0 x 30mm Lg. HHCS (S), M6 Flat Washer (K), and M6-1.0 Nylock Nut (L). See Fig. 3 and Fig. 4.
7. Reinstall Ground Wire to Regulator Relocating Bracket (N) and stock Bracket with stock hardware. See Fig. 3 and Fig. 4.
8. Install Motor (C) to Lower Shaft (E) with supplied hardware. See Motor Shafts Detail and Fig. 5.
9. Bolt Motor (C) to Motor Bracket (F) with M8-1.25 x 20mm Lg. Hex Flange Bolts (Q). Secure Motor Bracket (F) to Mounting Bracket (P) with M8-1.25 x 25mm Lg. HHCS (G), M8 Flat Washers (H), and M8-1.25 Nylock Nuts (J). See Fig. 6.
10. Install Upper Shaft (D) to Motor (C) with supplied hardware. See Fig. 6.
11. Install Control Module (A) to Motor Bracket (F) with M6-1.0 x 15mm Lg. HHCS (R) and tighten hardware. Plug in Wire Harness (B). See Fig. 7 and Wiring Details pages 6 - 8.
12. Install stock Steering Shaft to Upper Shaft (D) and reinstall Steering Wheel. See Fig. 8.
13. Ensure no components are binding, rubbing, or causing interference and tighten all hardware completely.

*(Illustrations continue on following pages)*

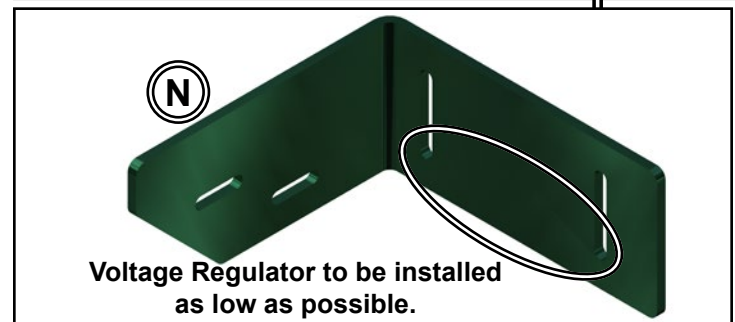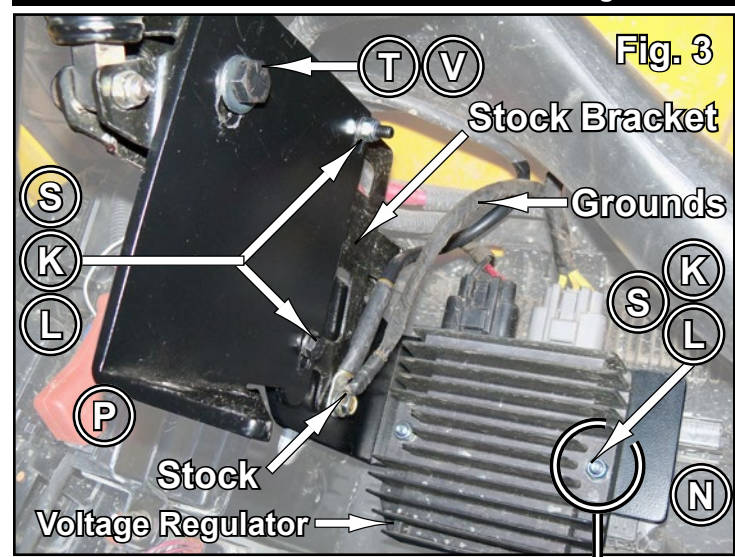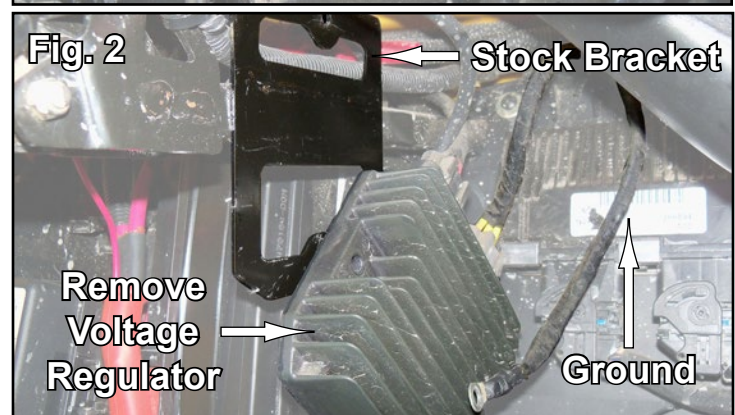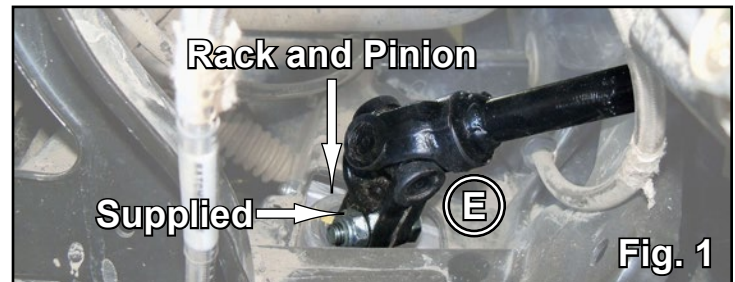
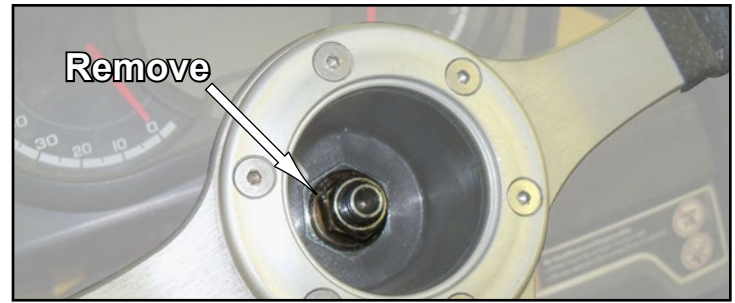




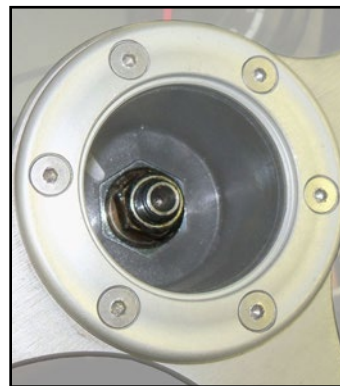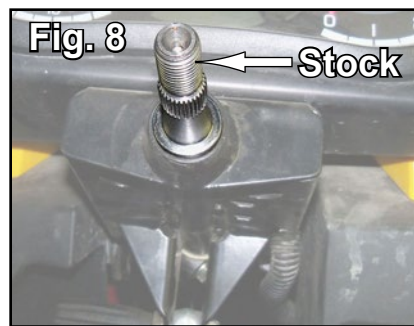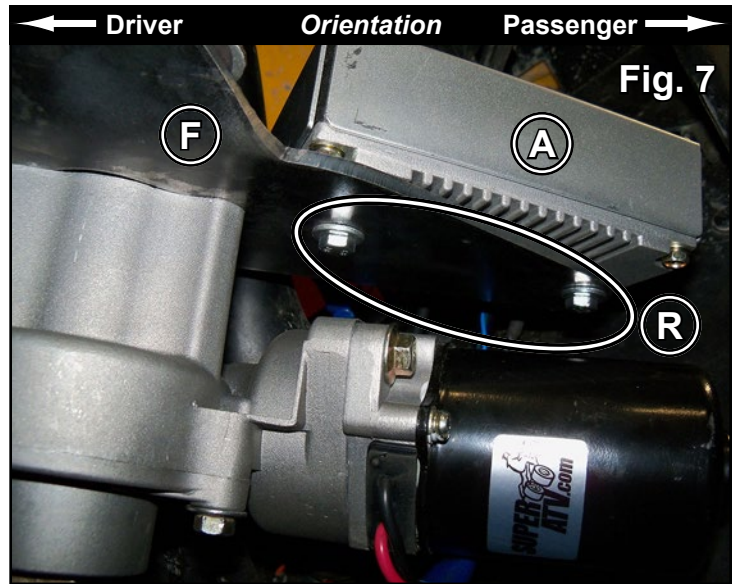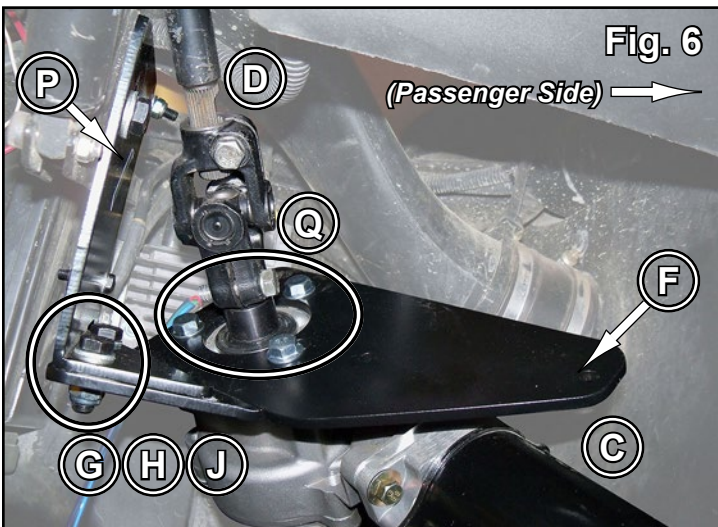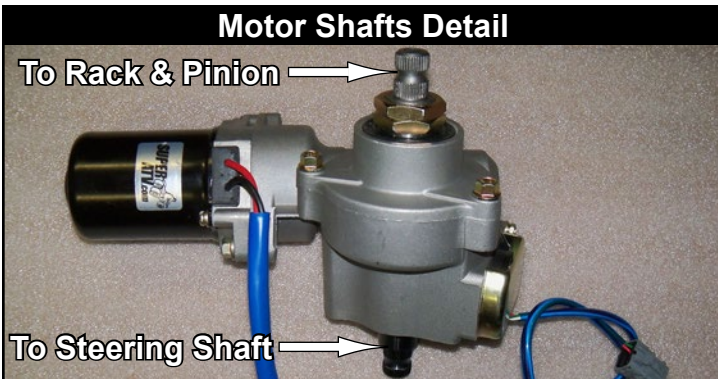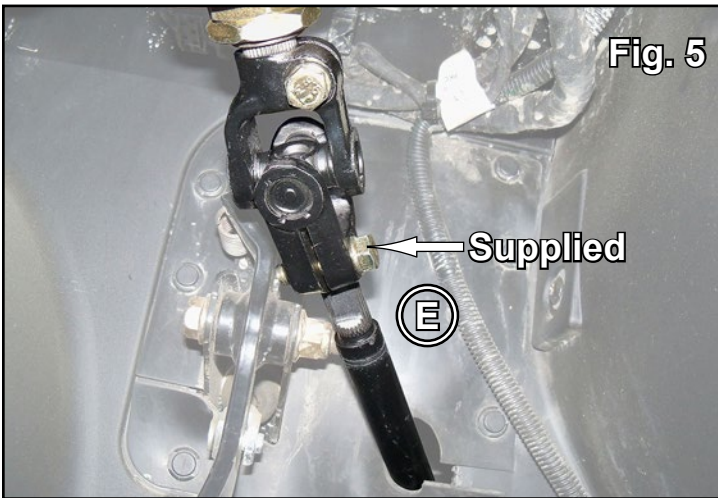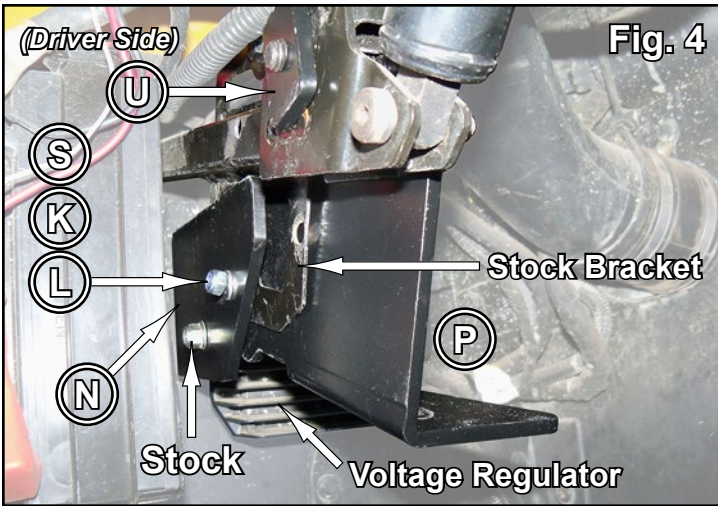



## Wiring Details

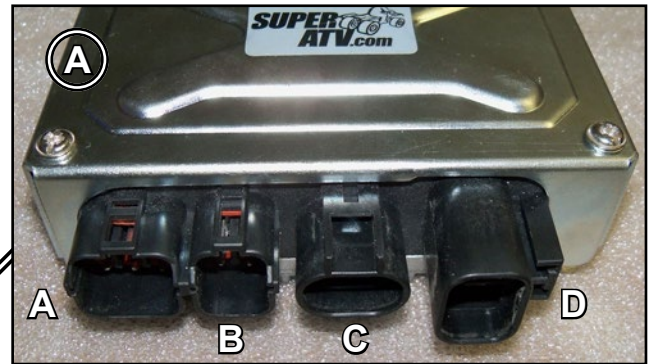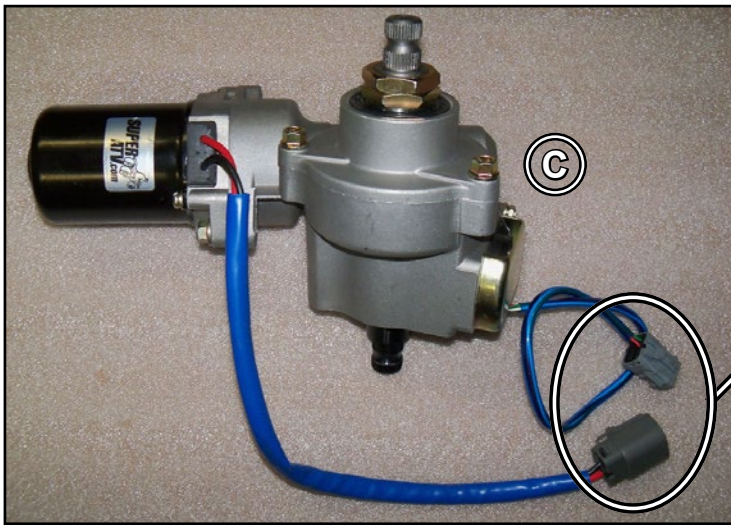

Plug	Function
A	Torque Sensor
B	Switched 12V Source
C	Power
D	Motor

When activated, Diagnostic Light will flash (1) time for about (1) second before turning off indicating proper function. Should different patterns occur, contact SuperATV.

Secure Diagnostic Light in a visible location.

