
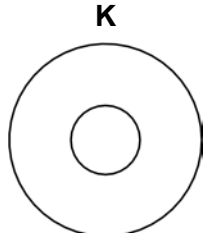
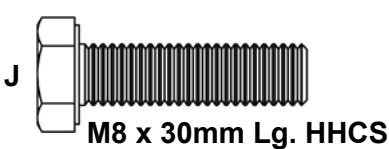
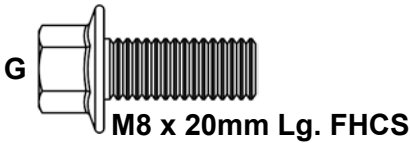


INSTALLATION INSTRUCTIONS

PS-P-RANXP-11 Polaris RangerXP

Power Steering

Item	Description	Qty
B	Mounting Bracket	1
C	Lower Shaft	1
D	Steering Shaft	1
G	M8-1.25 x 20mm Lg. FHCS	3
H	M6-1.0 x 16mm Lg. HHCS	2
J	M8-1.25 x 30mm Lg. HHCS	1
K	M8 Flat Washers	3
L	M8-1.25 Nylock Nut	1
N	Control Box Bracket	1

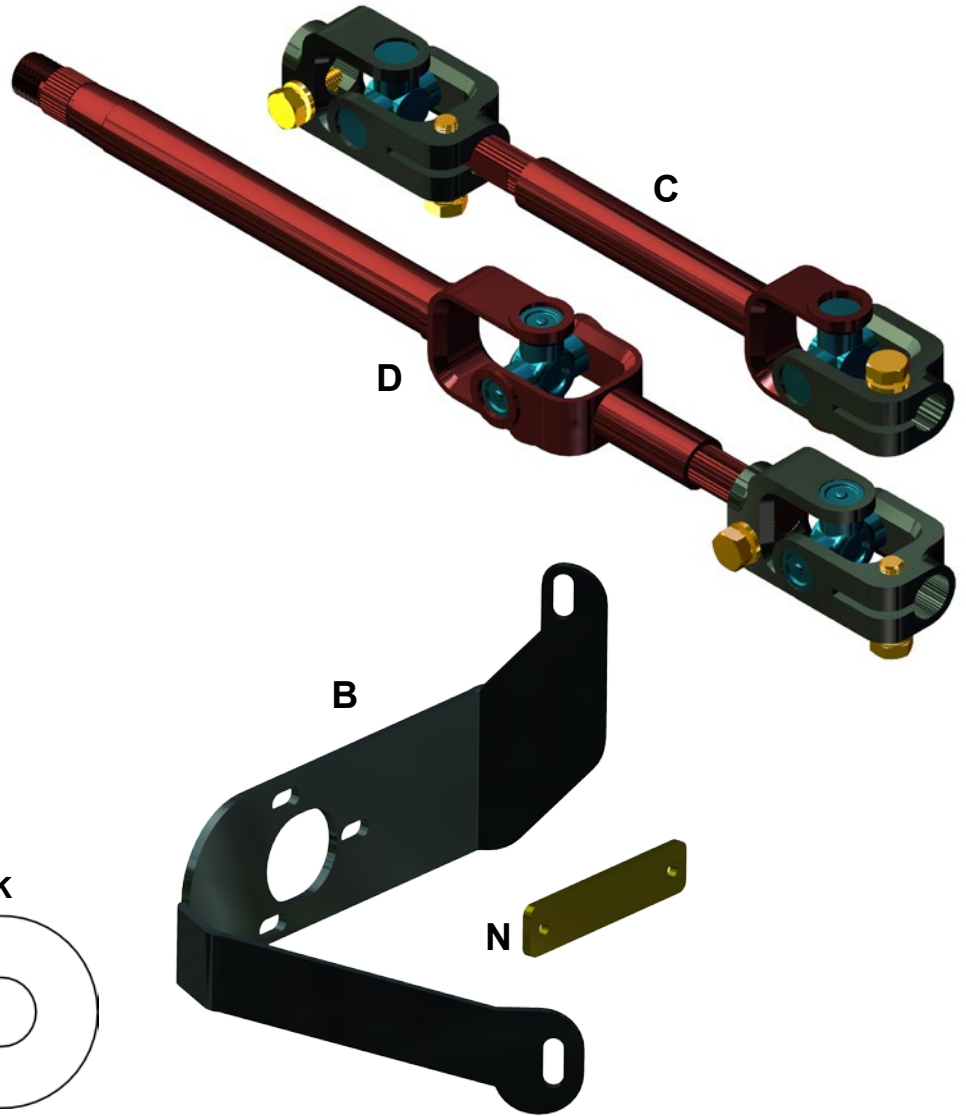

(kit contents continue on following page)

Read instructions and view illustrations before beginning.

Need help with your installation?

✉ sales@superatv.com 💻 www.superatv.com

☎ 1-812-574-7777 🕒 8:00am - 9:00pm EST M-Th
8:00am - 7:00pm EST Friday
9:00am - 2:00pm EST Saturday

*Thank You
For Choosing*

SUPERATV.COM

Liability Statement

SuperATV's products are designed to best fit users ATV/UTV under stock conditions. Adding, modifying, or fabricating any factory, or aftermarket, parts will void any warranty provided by SuperATV and is not recommended. SuperATV's products could interfere with other aftermarket accessories. If user has aftermarket products on machine, contact SuperATV to verify that they will work together.


Although SuperATV has thousands of satisfied customers, user should be aware that installing lift kits, long travel, or suspension kits, tires, etc will change the ride of machine and may increase maintenance and part wear. Operating any off-road machine while, or after, consuming alcohol and/or drugs increases risk of bodily harm or death. No warranty or representation is made as to this product's ability to protect user from severe injury or death. SuperATV urges operators and occupants to wear a helmet and appropriate riding gear at all times.

By purchasing and installing SuperATV products, user agrees that should damages occur, SuperATV will not be held responsible for loss of time, use, labor fees, replacement parts, or freight charges. SuperATV, nor any 3rd party, will not be held responsible for any direct, indirect, incidental, special, or consequential damages that result from any product purchased from SuperATV. The total liability of seller to user for all damages, losses, and causes of action, if any, shall not exceed the total purchase price paid for the product that gave rise to the claim.

SuperATV will warranty only parts provided by SuperATV. Any damage or problems with OEM housings, bearings, seals, or other manufacturers products will not be covered by SuperATV. SuperATV parts and products are not warranted if item was not installed properly, misused, or modified.

(kit contents continued)

Item	Description	Qty
A	Motor	1
E	Control Box	1
F	Wiring Harness	1

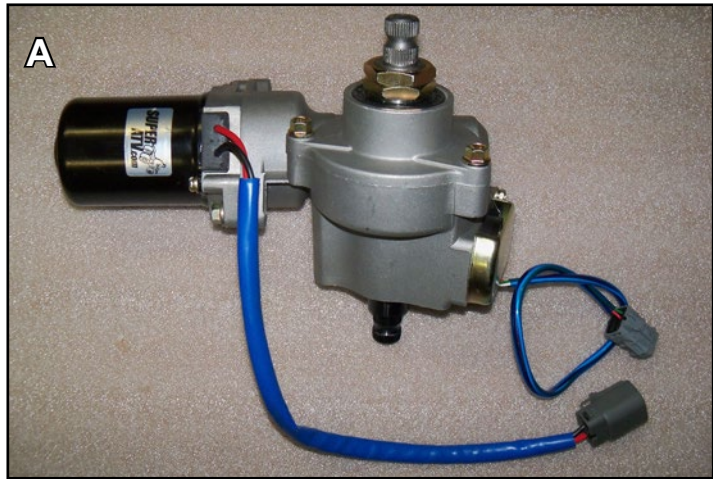

Do not tighten hardware completely unless noted. Keep all hardware for reuse.

1. Remove Lower Dash. See Fig. 1.
2. Unbolt Stock Shaft from Steering Rack. See Fig. 2. *Using a pry bar to lift plastic, covering Steering Rack, may help.*
3. Remove Steering Wheel along with any Washers and Spacers present. See Fig. 3.
4. Remove hardware from lower Tilt Adjustor hole. Remove Steering Column and hardware. See Fig. 4.
5. Remove stock Shaft; pull through Firewall. See Fig. 5.
6. Install Lower Shaft (C), through Firewall, and secure to Steering Rack with provided hardware. See Fig. 6 - 6a.
7. Install Control Box (E) to Steering Frame with Control Box Bracket (N) and M6-1.0 x 16mm Lg. HHCS (H). Box to be to Driver Side as much as possible. See Control Box Mounting.
8. Insert Steering Shaft (D) into Steering Column. Reinstall Steering Column with stock hardware. All stock Spacers must be reinstalled. See Fig. 6.
9. Install Mounting Bracket (B) to lower Tilt Adjustor hole with stock hardware and M8 Flat Washers (K). Secure opposite end to Frame with M8-1.25 x 30mm Lg. HHCS (J), M8 Flat Washer (K), and M8-1.25 Nylock Nut (L). See Fig. 7.
10. Install Motor (A) to Lower Shaft (C). Secure to Mounting Bracket (B) with M8-1.25 x 20mm Lg. HHCS (G). Attach Steering Shaft (D) to Motor (A). Secure shafts with provided hardware. See Fig. 8 and Motor Shafts Detail.
11. Tighten all hardware and plug Wiring Harness (F) into Control Box (E). **Ensure that no wires are pinched during install.** See Connections and Wiring Detail, pages 6 - 7.
12. Reinstall Lower Dash and Steering Wheel.



Fig. 1

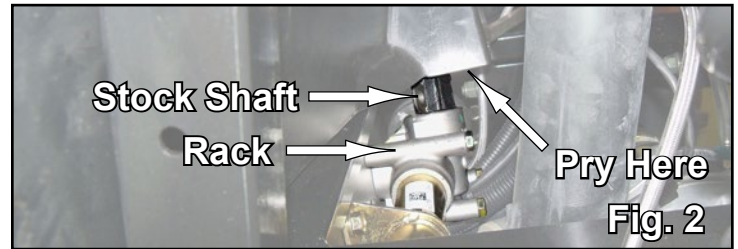


Fig. 2

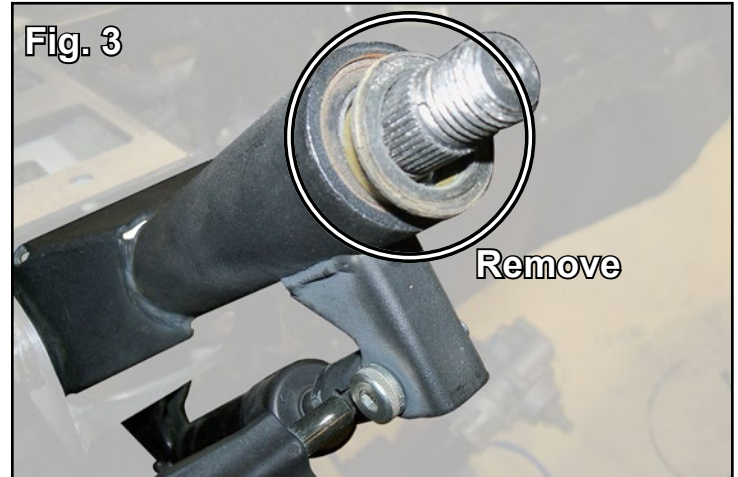


Fig. 3

Remove

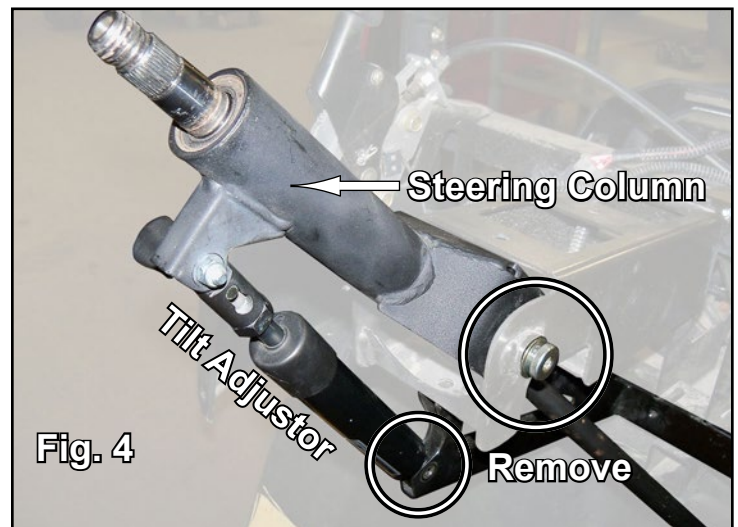


Fig. 4

Remove



Fig. 5





Remove
Stock Shaft

(Illustrations continue on following pages)

Fig. 6



CONTROL BOX MOUNTING

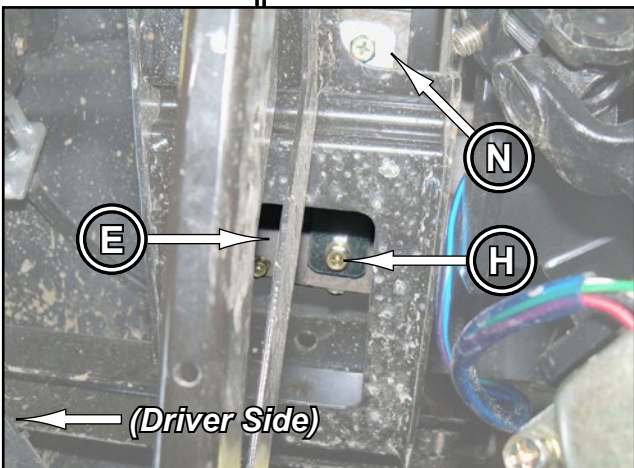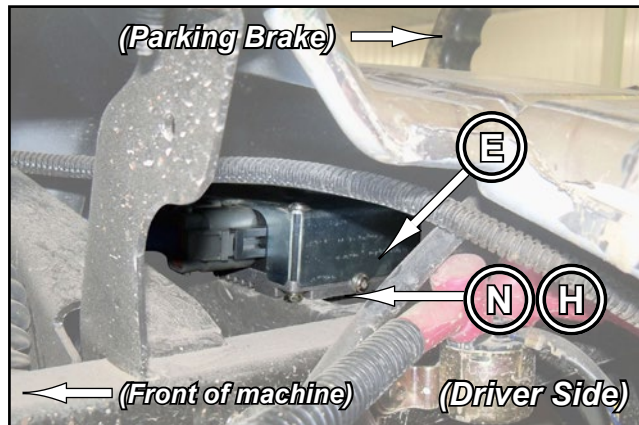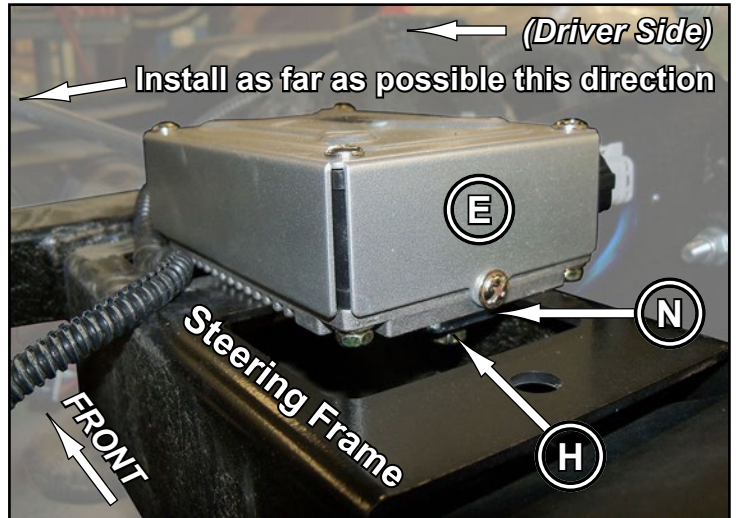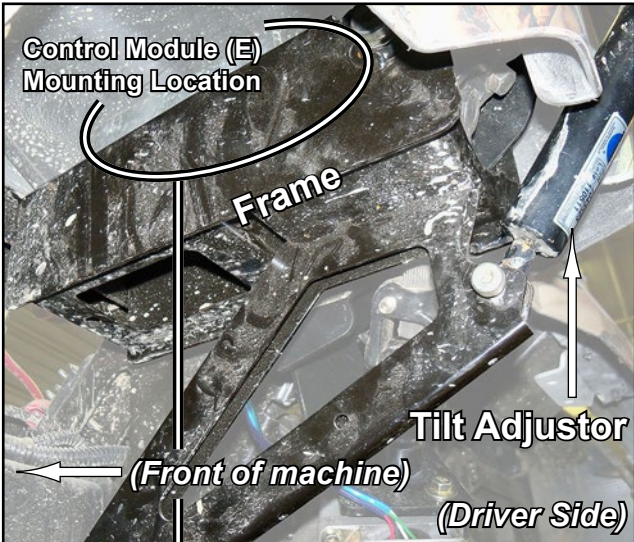

(Installation illustrations continued)

Fig. 8, Motor and Shafts Installation




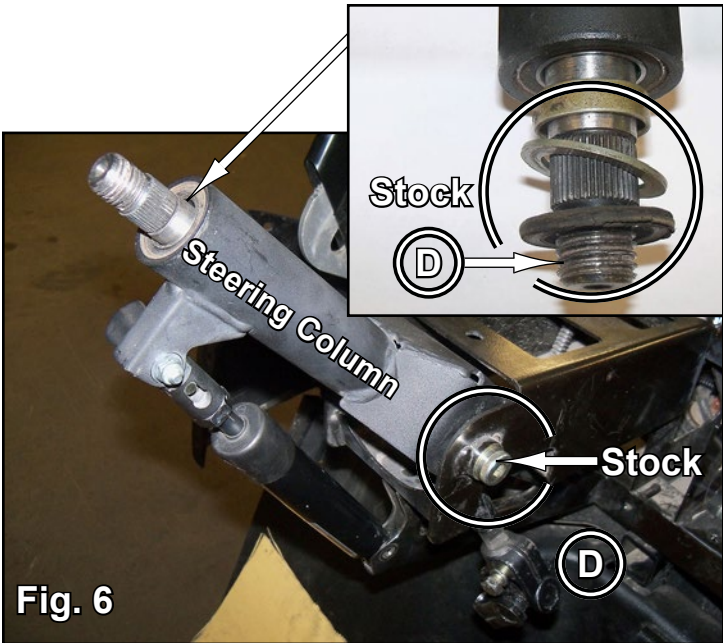


Fig. 6

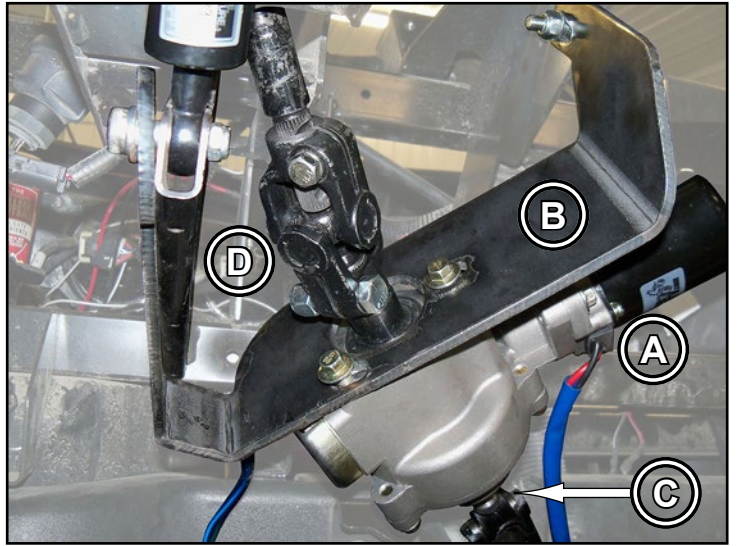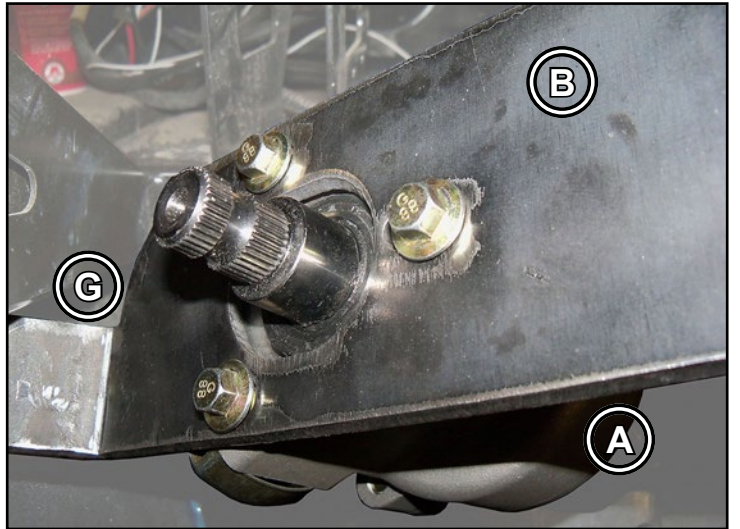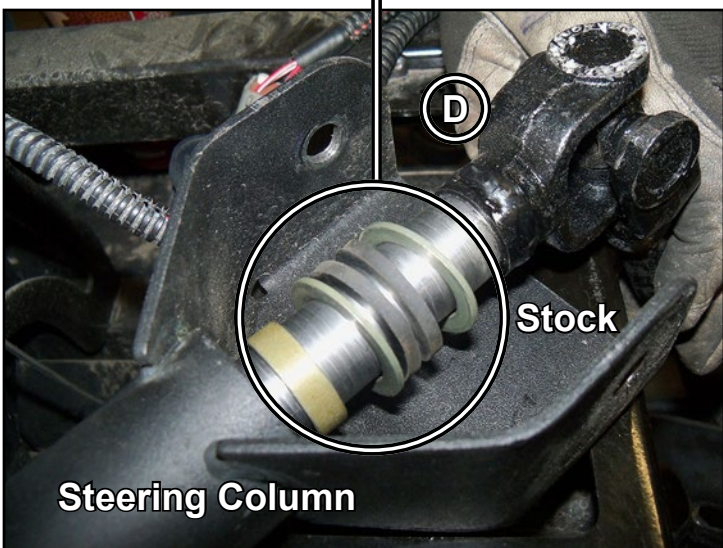

Steering Column








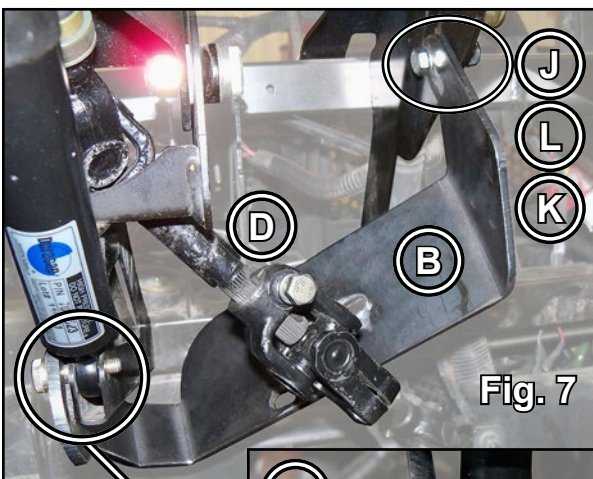


Fig. 7

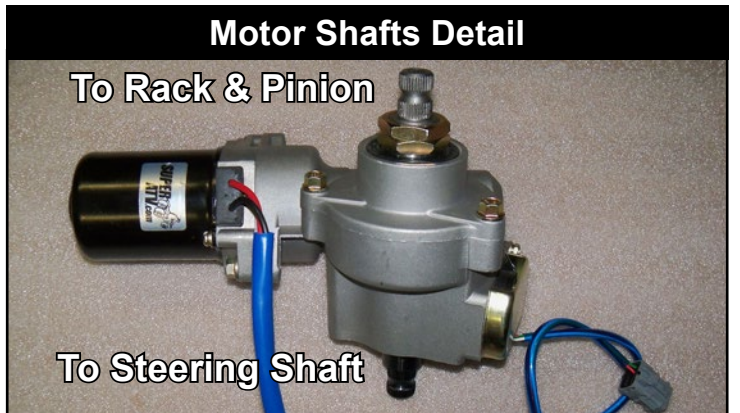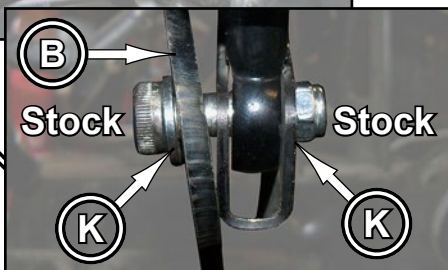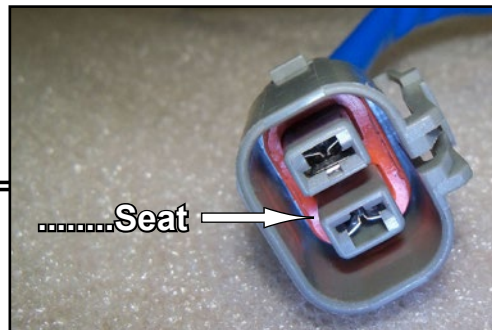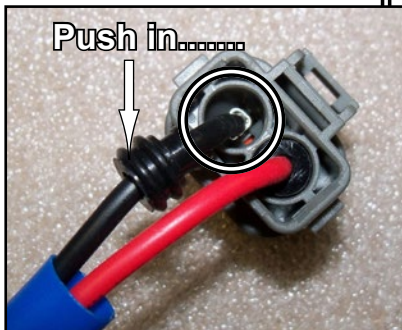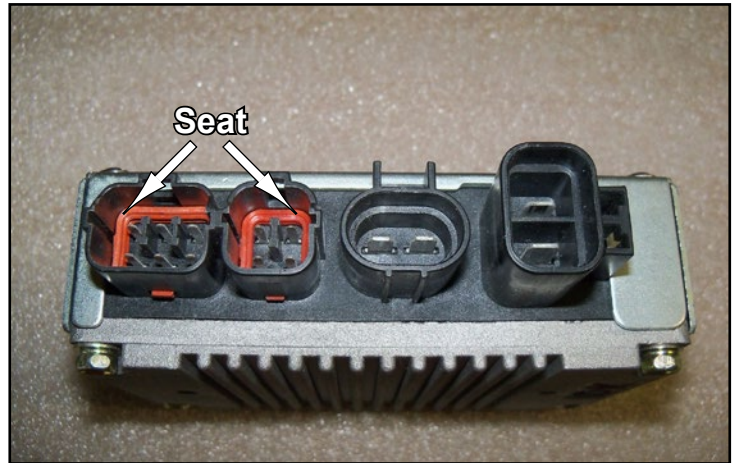
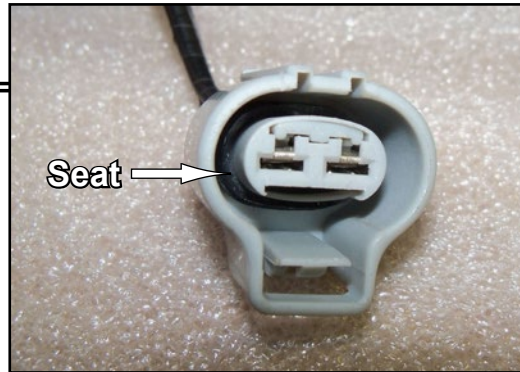


Connections



- Before installing, ensure that all waterproof connections are properly seated.
- If Gaskets are not seated, as shown, use a Flathead Screwdriver to seat.

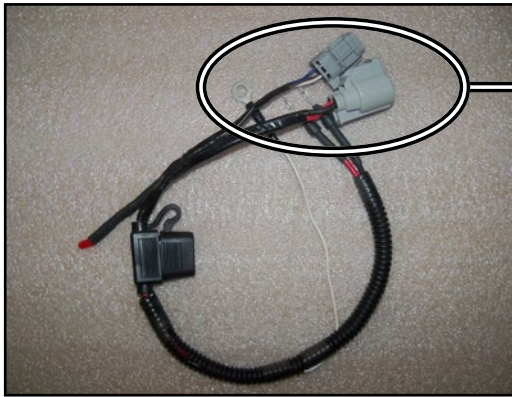

Wiring Details

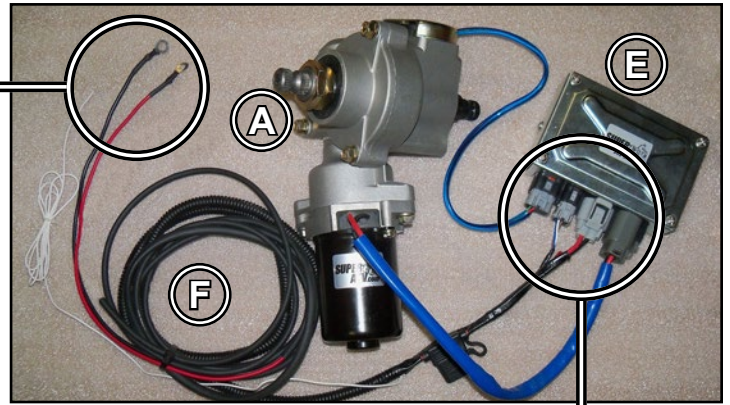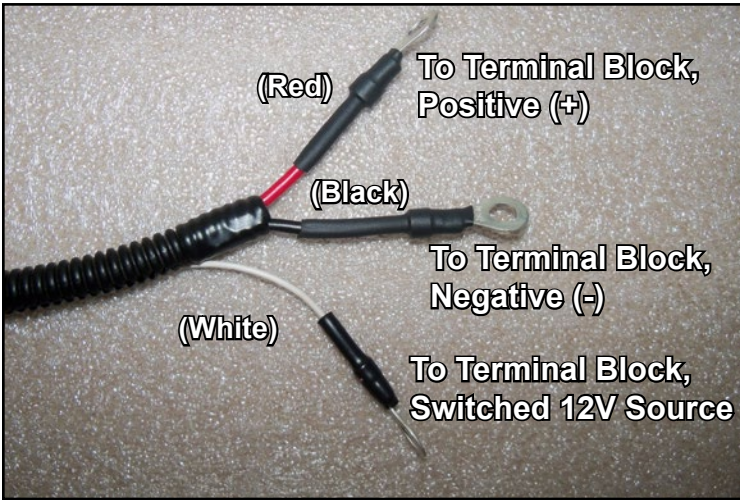

Plug	Function
A	Torque Sensor
B	Switched 12V Source
C	Power
D	Motor

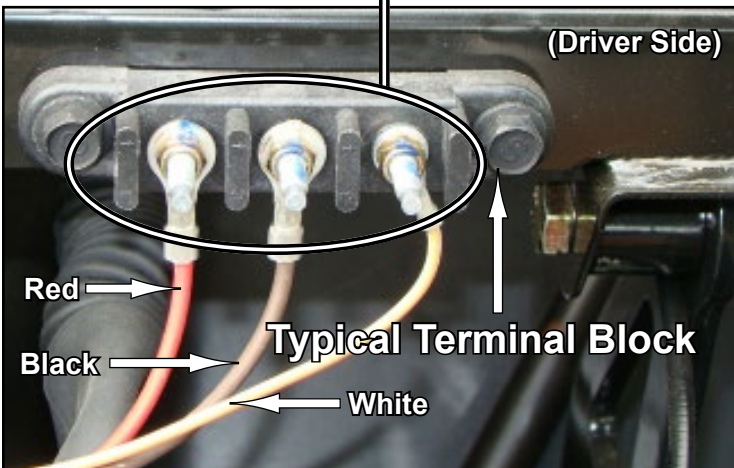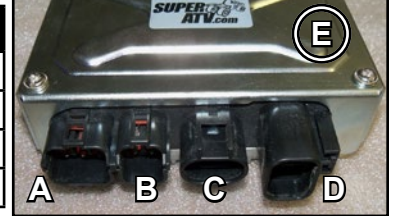

When activated, Diagnostic Light will flash (1) time for about (1) second before turning off indicating proper function. Should different patterns occur, contact SuperATV.

Secure Diagnostic Light in a visible location.

