




SUPERATV.com

Hardware:

- (26)6mm x 1.0-25mm
- (52)6mm Washers
- (26)Plastic Spacer Insert
- (26)Rubber Grommets
- (26)6mm Nylock Nuts

740B Clifty Drive
Madison IN, 47250
Phone: 1-812-574-7777
FF-Y-G700

- 1) Have another person hold the fender flare up to the side of the Grizzly, position the fender flare on the fender where it best fits on the fender.
- 2) With the fender in place take a marker and put a dot in each fender flare hole onto the plastic to mark where you need to drill your 1/2" holes.(Refer to Fig.1.)
- 3) Now, take a drill with a 1/2" drill bit and drill a hole through the plastic at each spot you made with your marker. Refer to Fig.2 showing the 1/2" hole in the plastic.
- 4) Next, place the rubber grommets in each hole drilled. (Refer to figure 3.)
- 5) Now place 1 clear plastic spacer insert into each one of the rubber grommets.
- 6) Its time now to put you fender flare on the machine, first place the fender flare up to the plastic and line the holes in the fender flare up with the holes in the grommets. Take your 6mm bolts with one washer on it and slide it through the hole and place a washer then the nut on the back side. Install all nuts and bolts before tightening anything. Fig.4 shows your finished product.
- 7) Repeat steps 1-6 on the other 3 corners of the machine.

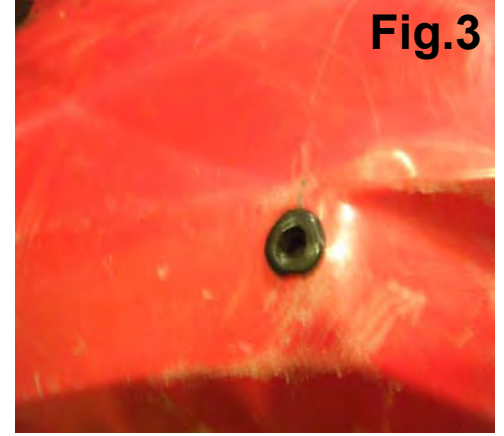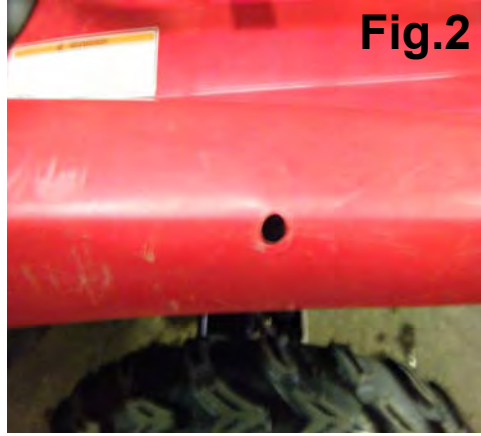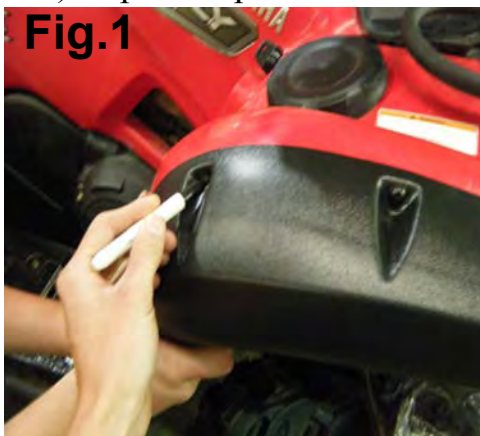

THANKS FOR CHOOSING

SUPERATV.com

HAPPY TRAILS!